

MAXIM® DYAD **OPERATORS (LOW PROFILE)**

**FIG. 7 APPLICATION OF MAXIM DYAD OPERATOR
(SILL MOUNT VERSION) (LOW PROFILE)**


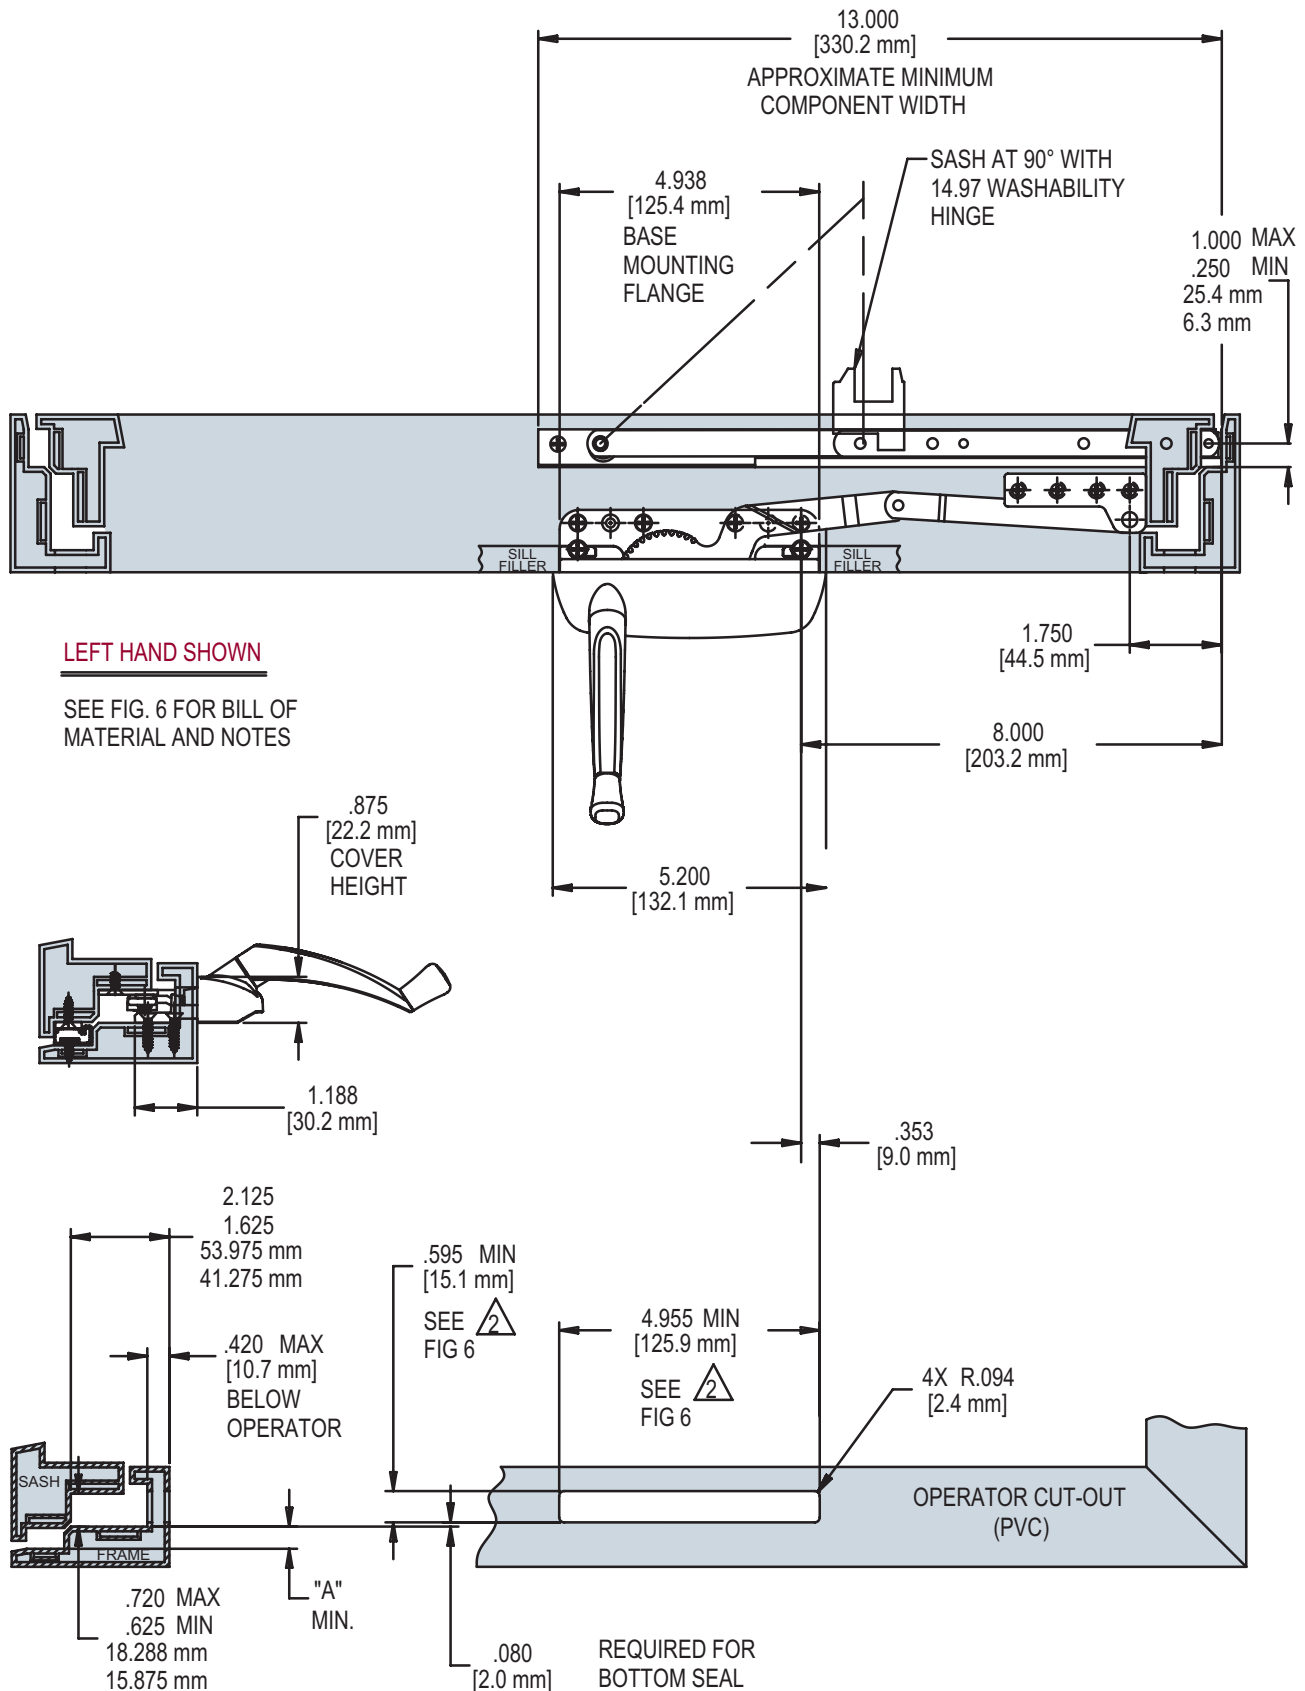


FIG. 8 APPLICATION OF MAXIM DYAD OPERATOR (CONTINUED)
(SILL MOUNT VERSION) (LOW PROFILE)

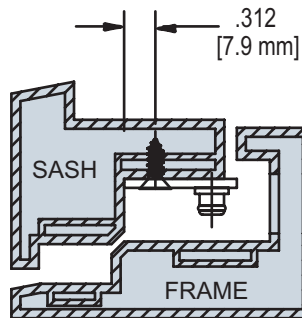

**11661.XX
BRACKET PLACEMENT**

HARDWARE SHOWN FOR LEFT HAND WINDOW, SEE FIG.5	
PART NUMBER	DESCRIPTION
50.51.XX.XXX	DYAD OPERATOR
11661.XX	STUD BRACKET
14.97.00.XXX	WASHABILITY HINGE
11454.XX	CONTOUR HANDLE
31882	GASKET (PVC)

HINGE	"A"
14.97.00.XXX 14.12.00.XXX	.422 [10.7 mm]
OTHER 14 SERIES CASEMENT HINGES	.375 [9.5 mm]

NOTE:

- ENCORE LOW PROFILE DYAD OPERATOR WITH 11661.XX L.H. OR 11662.XX R.H. STUD BRACKET REQUIRES THE SAME MOUNTING POSITION AS ENCORE LOW PROFILE DUAL ARM OPERATOR


2 HOLD THIS DIMENSION AS CLOSE TO THE MINIMUM AS MANUFACTURING TOLERANCES ALLOW. A CLOSE FITTING CUT-OUT HELPS TO STABILIZE THE OPERATOR AGAINST ROCKING

- GASKET 32658 IS REQUIRED ON PVC AND METAL PROFILES FOR AN IMPROVED AIR AND WATER SEAL

- HANDLE/COVER IS OPPOSITE HAND ON ENCORE DYAD OPERATORS. EXAMPLE: LH ENCORE DYAD OPERATORS REQUIRE RH HANDLE/COVER

MAXIM® DYAD OPERATORS (LOW PROFILE)

FIG. 9 MAXIM DYAD OPERATOR
(SILL MOUNT VERSION)
(LOW PROFILE)

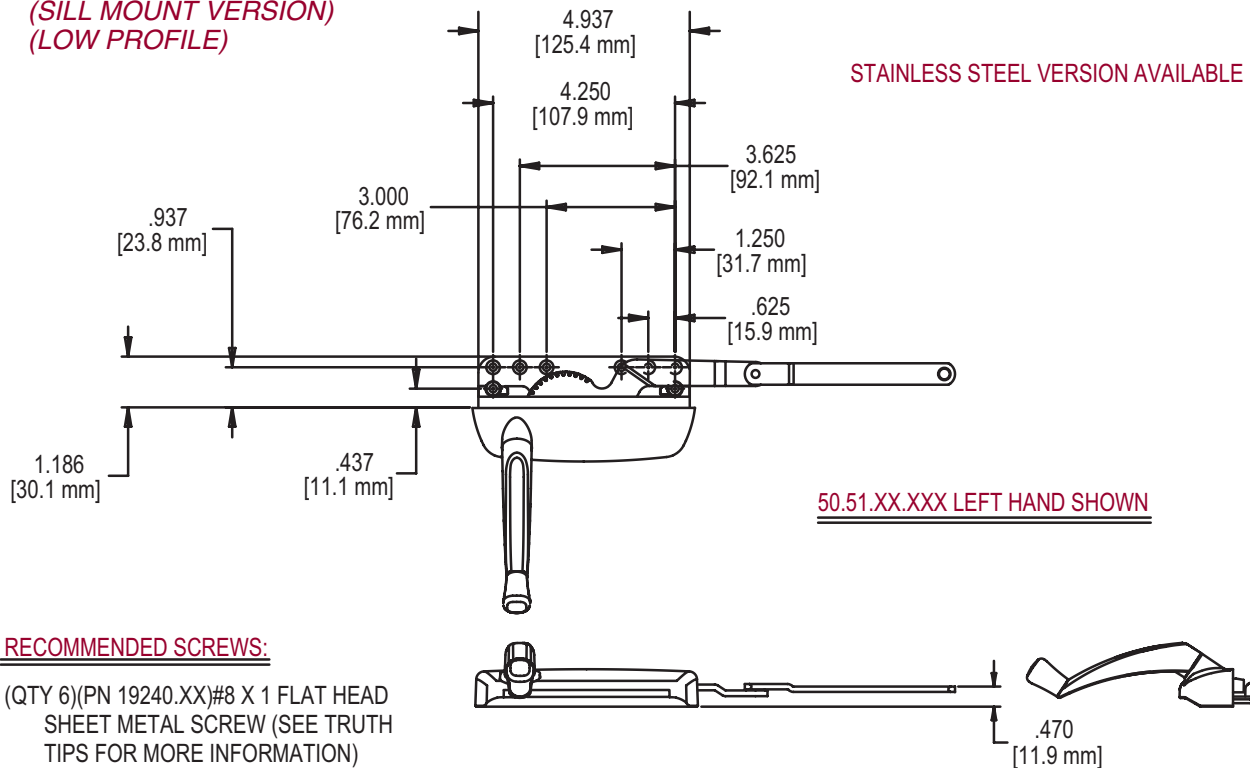

RECOMMENDED SCREWS:

(QTY 6)(PN 19240.XX)#8 X 1 FLAT HEAD
SHEET METAL SCREW (SEE TRUTH
TIPS FOR MORE INFORMATION)

(QTY 2)REAR MOUNT:#8-32 X 3/8 PAN HEAD
MACHINE SCREW PN 19545.XX

FIG. 10 MAXIM COVER 41212.XX /HANDLE 11329.XX (RH) (SHOWN)


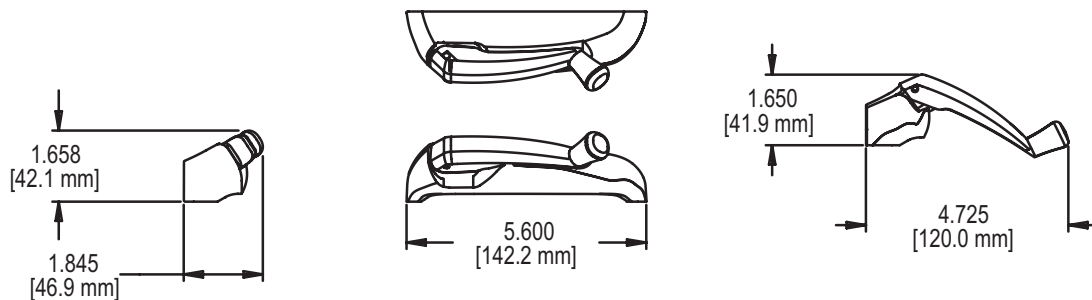


FIG. 11 STUD BRACKET 11661.XX(LH) (SHOWN), 11662.XX(RH)

HANDING OF BRACKET DOES NOT
NECESSARILY MATCH HANDING OF
OPERATOR

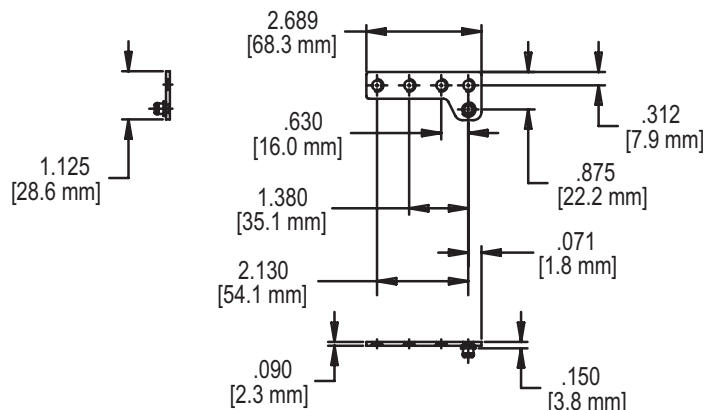

RECOMMENDED SCREWS:

(QTY 4)(PN 19205.XX)#8 X 1/2 FLAT HEAD
SHEET METAL SCREW (SEE TRUTH
TIPS FOR MORE INFORMATION)